

17: Maintenance service, D5204T3

V60, 2013, D5204T3, TF-80SC, L.H.D

17/3/2018



PRINT

17: Maintenance service, D5204T3

Service program

Program point:	year:	1	2	3	4	5	6	7	8	9	10	11	12	13
	km x 1000:	30	60	90	120	150	180	210	240	270	300	330	360	390
	miles x 1000:	18	36	54	72	90	108	126	144	162	180	198	216	234
Automatic transmission control - check the park / neutral position (PNP) switch		x	x	x	x	x	x	x	x	x	x	x	x	x
Parking brake - check and adjust		x	x	x	x	x	x	x	x	x	x	x	x	x
External lighting - check the function		x	x	x	x	x	x	x	x	x	x	x	x	x
Horn - check the signal		x	x	x	x	x	x	x	x	x	x	x	x	x
Headlamp/fog lamp - check and align headlamps		x	x	x	x	x	x	x	x	x	x	x	x	x
Washers and wipers for windshields and headlamps - check the function and for signs of wear		x	x	x	x	x	x	x	x	x	x	x	x	x
Seat belts - check the function and for signs of wear		x	x	x	x	x	x	x	x	x	x	x	x	x
Vehicle with camera for collision warning - clean the inside of the windscreen in front of the camera lens		x	x	x	x	x	x	x	x	x	x	x	x	x
Vehicles with alcolock - calibrate	Calibration must be performed once a year, when the information text in the display indicates this.													
Air filter, passenger compartment		x	x	x	x	x	x	x	x	x	x	x	x	x

- replace														
Program point:	year:	1	2	3	4	5	6	7	8	9	10	11	12	13
	km x 1000:	3060	90	120	150	180	210	240	270	300	330	360	390	
	miles x 1000:	1836	54	72	90	108	126	144	162	180	198	216	234	
Raise the vehicle														
Engine, transmission, transmission - check for leaks	In event of leakage from the transmission, check the oil level.	x	x	x	x	x	x	x	x	x	x	x	x	x
Engine oil, oil filter - change oil and oil filter		x	x	x	x	x	x	x	x	x	x	x	x	x
Automatic transmission The oil does not normally need changing. The oil must be changed if instructed to do so in the display	Note! For vehicles used as taxis or primarily used for towing trailers, change the oil according to the service program.		x		x		x		x		x		x	
Wheels and tires - check for damage and signs of wear.		x	x	x	x	x	x	x	x	x	x	x	x	x
Tires excl. spare wheel - check and adjust the air pressure		x	x	x	x	x	x	x	x	x	x	x	x	x
Program point:	year:	1	2	3	4	5	6	7	8	9	10	11	12	13
	km x 1000:	3060	90	120	150	180	210	240	270	300	330	360	390	
	miles x 1000:	1836	54	72	90	108	126	144	162	180	198	216	234	
Drive shafts - check the play - check rubber bellows			x		x		x		x		x		x	
Brake pads, brake discs - check	Brake pads, front, check Brake pads, rear, check	x	x	x	x	x	x	x	x	x	x	x	x	x
Brake lines, fuel lines, fuel filter - check for leakage and damage			x		x		x		x		x		x	
Fuel filter - replace	In markets with		x		x		x		x		x		x	

	contaminated fuel: - replace at 10,000 - 20,000 km intervals Note! Change only according to km/miles interval.													
- drain off the condensation		x	x		x		x		x		x		x	
Front suspension, steering system - check for wear according to: Wheel angles check			x		x		x		x		x		x	
Rear wheel suspension - check for wear according to: Wheel angles check			x		x		x		x		x		x	
AWD: Final drive, bevel gear - check for leaks	Only check the oil level if there is leakage		x		x		x		x		x		x	
AWD: Propeller shaft, pilot bearing, universal joint - check for signs of wear			x		x		x		x		x		x	
Lower the vehicle														
Program point:	year:	1	2	3	4	5	6	7	8	9	10	11	12	13
	km x 1000:	3060	90120	150180	210240	270300	330360	390						
	miles x 1000:	1836	5472	90108	126144	162180	198216	234						
Air cleaner (ACL) engine - replace	Clean the air cleaner (ACL) housing. Note! Change only according to km/miles interval.		x		x		x		x		x		x	
Fluid levels - engine compartment - check and adjust the brake fluid, clutch fluid,		x	x	x	x	x	x	x	x	x	x	x	x	

power steering fluid, washer fluid. coolant															
Engine coolant - check and adjust the antifreeze/corrosion protection rating		x	x	x	x	x	x	x	x	x	x	x	x	x	x
Vehicles with temporary tire sealing kit - check sealant container - replace every four years (see decal)															
Program point:	year:	1	2	3	4	5	6	7	8	9	10	11	12	13	
	km x 1000:	30	60	90	120	150	180	210	240	270	300	330	360	390	
	miles x 1000:	18	36	54	72	90	108	126	144	162	180	198	216	234	
Outer accessory drive belt and mechanical belt tensioner - replace according to the service program or: - replace at max. 10 year intervals	For engine No.: -884797		x				x			x			x		
Outer accessory drive belt (with hydraulic belt tensioner) -replace the belt according to the service program, or: - replace the belt at a maximum 10 year interval	From engine No.: 884798-1046801			x			x			x			x		
Hydraulic belt tensioner - replace according to the service program or: - replace at max. 10 year intervals	From engine No.: 884798-1046801						x						x		
Outer accessory drive belt (with mechanical belt tensioner) -replace the belt according to the service program, or:	From engine No.: 1046802-			x			x			x			x		

- replace the belt at a maximum 10 year interval														
Mechanical belt tensioner - replace according to the service program or: - replace at max. 10 year intervals	From engine No.: 1046802-					x							x	
Inner auxiliary belt - replace according to the service program or: - replace at max. 10 year intervals						x							x	
Timing belt, belt tensioner idler pulley - replace according to the service program or: - replace at max. 10 year intervals						x							x	
Brake fluid - replace	Recommend that a customer with normal mileage has the fluid replaced every other year.		x		x		x		x		x		x	
	Note! The oil must be changed every year if the car is used for mountain driving or is mainly used in humid climates.	x	x	x	x	x	x	x	x	x	x	x	x	x
SRI - set the service reminder indicator (SRI) to zero	Refer to: Resetting the service reminder indicator (SRI)	x	x	x	x	x	x	x	x	x	x	x	x	x

17/3/2018

PRINT