

35: Lighting, front

V70 (00-08), 2001, B5244T3, M58, YV1SW58K311042259, 042259

20/10/2015

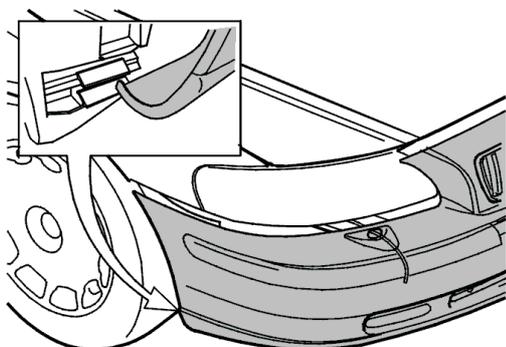
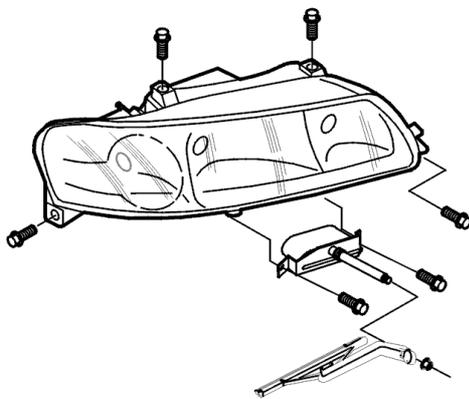
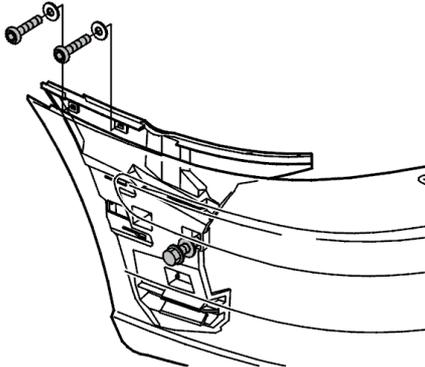


PRINT

35: Lighting, front

Headlamp / bulb,
replacing

Removal

Removing the
headlamp

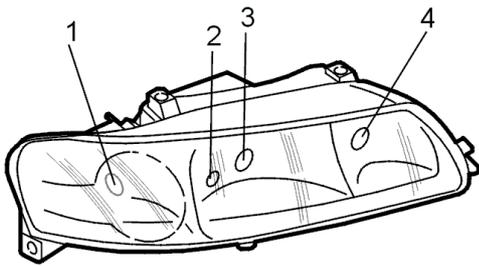
- Switch off the ignition
- Set the switch for external lighting to zero
- Remove the nut from the headlamp wiper
- Remove the headlamp wiper
- Remove the bumper cover on the relevant side. Remove the clips for the grille. See Casing
- Remove the upper screws from the guide for the bumper cover
- Remove the lower front screw. Slacken off the rear screw.
- Tension the guide. Remove the screw on the outside of the headlamp
- Carefully tension the casing. Remove the innermost screw from the headlamp
- Remove the uppermost screws from the headlamp
- Apply tape as protection above the casing at the headlamp.
- Carefully pry out the casing. Position the lower edge of the end of the casing on the guide. Hold the cover in position
- Release the headlamp
- Pull off the washer hose
- Separate and remove the connectors
- Remove the headlamp
- Remove the headlamp wiper motor. See Motor, headlamp wiper, replacing .

Other

information

- To replace the bulb. See Bulb, headlamp, replacing
- If there are misting problems in the headlamp. See If misting problems arise .

1. Indicator lamps
2. Parking lamps
3. Low beam
4. High beam.



Installation

Installing the headlamp

- Install the headlamp wiper motor. See Motor, headlamp wiper, replacing
- Position the headlamp
- Position the washer hose through the hole on the bracket for the wiper motor
- Pull out the top edge of the casing. Position the headlamp
- Thread in the upper screws
- Check the position of the air bleed hoses
- Pull the casing down from the guide
- Thread in the outer and inner screws

- Press in the headlamp. Tighten the upper screws
- Tighten the outer and inner screws
- Install the holder and guide for the cover
- Install the bumper cover. See Casing
- Install the headlamp wiper arm
- Install the nut
- Check and adjust the headlamp beam. See Headlamps, aligning .

20/10/2015

PRINT